








CSI Mk III Nozzle Dismantling Sequence



<p>1</p> <p>Unscrew the air cap retaining ring</p> 	<p>2</p> <p>Remove the air cap</p> 
<p>3</p> <p>Using the 10mm spanner from the kit, carefully loosen but do not remove the liquid tip.</p> 	<p>4</p> <p>Unscrew and remove the rear cap <i>(Keeping your hand over the rear of the nozzle at all times.)</i></p> 
<p>5</p> <p>Remove the cleaning pin spring from the body.</p> 	<p>6</p> <p>Now remove the liquid tip, This exposes the cleaning pin</p> 
<p>7</p> <p>Place the piston extractor over the cleaning pin and carefully push towards the rear of the nozzle body</p> 	<p>8</p> <p>Carefully pull the cleaning pin piston assembly out of the rear of the nozzle body and place to one side.</p> 